28" EDF Jet Provost Build photos



Just some of the useful tools needed plus a quality razor plane

FUSELAGE




Make up left & right hand fuselage sides and line with 12.5mm triangle; Note saw cuts to aid bending



Add the formers 6/7 and 8



Enclose the other Fuselage side

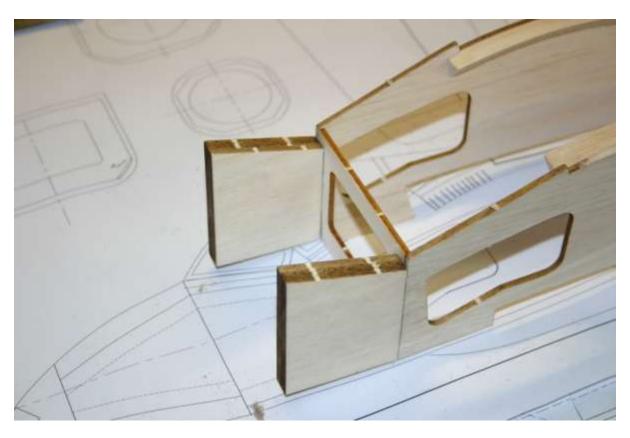

Add parts 10 & 11



Fit the fan and Thrust tube





